


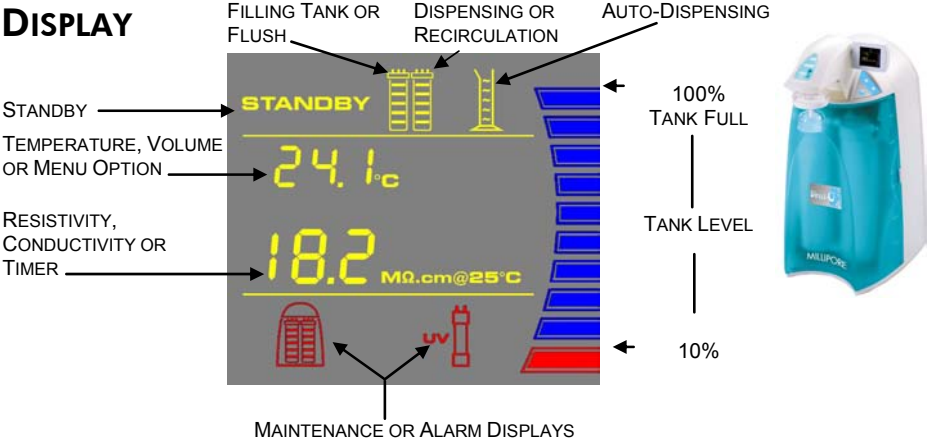

WHAT IT MEANS

FILLING TANK MODE	PRE OPERATE MODE	DISPENSING MODE OR RECIRCULATION	VOLUMETRIC DISPENSING MODE	DISPENSING OR RECIRCULATION DURING FILLING TANK MODE	FLUSH MODE

⇒ Refer to the User Manual for more information on Operating Modes.

RECIRCULATING WATER

To enhance the quality of the Product Water before dispensing water, press:

⇒ The Product water quality is displayed automatically during DISPENSING mode or during RECIRCULATION.

GETTING WATER

Using Volumetric Dispensing:

1. Access the F01 menu
2. Set the volume
3. Press the Dispensing Button (*3)

Using the Dispensing Button:

MAINTENANCE DISPLAYS

DISPLAY	WHAT IT MEANS	WHAT TO DO
	The SmartPak cartridge has to be changed.	Replace the SmartPak cartridge using the User Manual.
	The Product resistivity is less than the Resistivity Setpoint.	Replace the SmartPak cartridge using the User Manual.
	(UV System only) The UV Timer is exhausted.	Replace the UV Lamp using the User Manual.

⇒ Refer to the User Manual for more information on Maintenance.

TROUBLESHOOTING DISPLAYS

DISPLAY	WHAT IT MEANS	WHAT TO DO
	The SmartPak cartridge is not installed correctly or not installed at all.	Reinstall the SmartPak cartridge. If the alarm is still displayed, then contact Millipore.
	(UV System only) The UV Lamp is not installed correctly or not installed at all.	Power OFF the system. Reinstall the UV Lamp. If the alarm is still displayed, then contact Millipore.
	During FLUSH mode, the Tank Outlet Valve is not open. The system will not resume FLUSH mode until the tank is emptied of water.	Open the Tank Outlet Valve to drain the water from the tank. Check that the Tank Outlet Valve and Tubing are directed downwards into the drain.

⇒ Refer to the User Manual for more information on Troubleshooting.