

DOC273.52.00145

Rail mounting hardware kit

Instruction Sheet



LANGE 

UNITED FOR WATER QUALITY

Instruction Sheet

DOC273.52.00145

Rail mounting hardware kit

Introduction

This instruction sheet describes the installation of the rail mounting kit (Cat. No. 6184900) for a 1½-in. NPT thread (45°) pipe.

Items supplied are shown in [Figure 1](#): . Rail mounting dimensions are shown in [Figure 2](#): on [page 4](#).

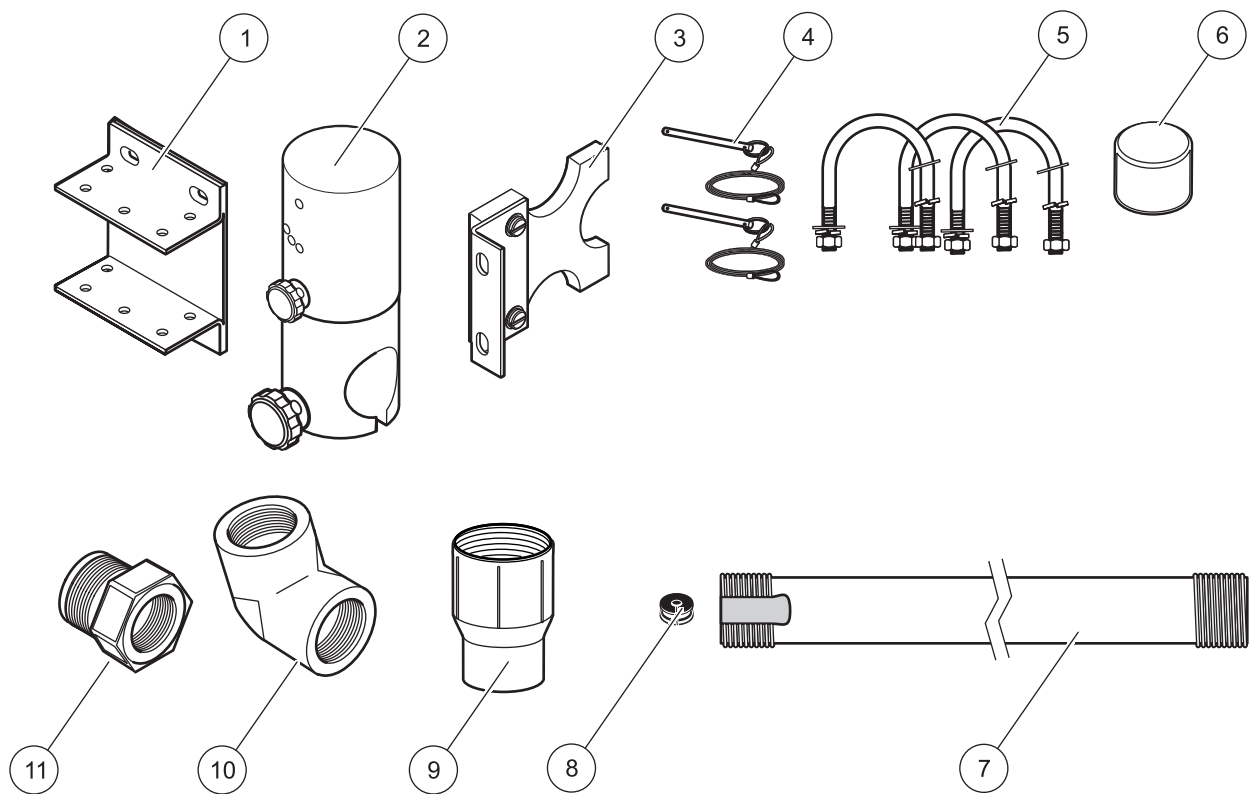


Figure 1: Items supplied with mounting hardware kit

1	Mounting bracket	7	Immersed pipe (refer to Figure 2 : for dimensions)
2	Immersed pipe bracket (joint)	8	Plug
3	Immersed pipe support	9	Reducer, 1½-in. NPT inside thread/1-in. NPT inside thread
4	Locking pin (2x)	10	Elbow 45°, 2 x 1½-in. NPT inside thread
5	U-bolt (3x)	11	Reducer, 1½-in. NPT outside thread/1-in. NPT inside thread
6	Screw top		

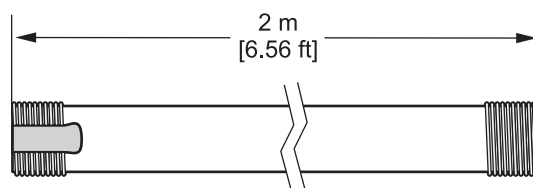


Figure 2: Dimensions

Selecting the installation location

Wichtiger Hinweis: Refer to the probe user manual when installing the mounting hardware. Note all safety instructions and hazards.

Hinweis: When selecting the installation location, always ensure there is safe access to all parts of the system and that the sensor will never hit the tank wall.

During the selection of the installation location, pay attention to:

- The load bearing capacity and strength of the railings (lever forces due to flow and installation)
- The maximum cable and tubing lengths
- The flow conditions and the space required when taking the sensor out of the tank for cleaning

Hinweis: Refer to the probe user manual for sensor cleaning instructions.

Installing the rail mount hardware

1. Find a suitable installation location and loosely fit the mounting bracket to the railings (Figure 3: on page 5).
2. Fit the immersed pipe bracket (joint) to the mounting bracket using the two locking pins (Figure 4: on page 6).
3. Fit the immersed pipe through the immersed pipe bracket and tighten the large knurled bolt (Figure 5: on page 6).

Hinweis: Lock the joint using the small knurled bolt and lock the immersed pipe using the large knurled bolt.

4. Install the immersed pipe support (Figure 6: on page 7) and place the immersed pipe on the immersed pipe support.
 - Installing the sensor without a cleaning unit—Guide the sensor cable through the reducer, the elbow and the immersed pipe. Bolt all the pieces together (Figure 7: on page 8). When installing the sensor without a cleaning unit, fit the plug from the set of small parts above the sensor cable.
 - Installing the sensor with a cleaning unit—Guide the sensor cable and the air tubing through the elbow and the immersed pipe. Bolt all pieces together (Figure 8: on page 9).

Wichtiger Hinweis: Ensure the sensor cable (air tubing) cannot be rubbed, crushed or cut.

5. Fit the screw top ([Figure 9:](#) or [Figure 10:](#) on page 10).
6. Pivot the immersed pipe over the edge of the tank and align all parts.

Hinweis: Align the sensor to the process flow so that the flow arrives at the rear.

7. Tighten all bolts.

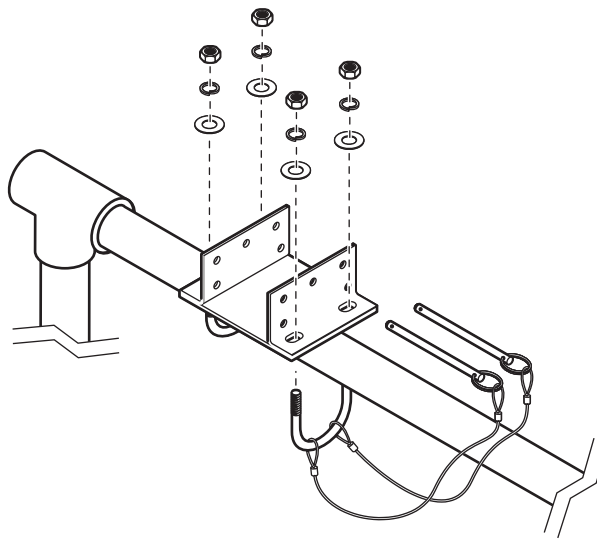


Figure 3: Installing the mounting bracket

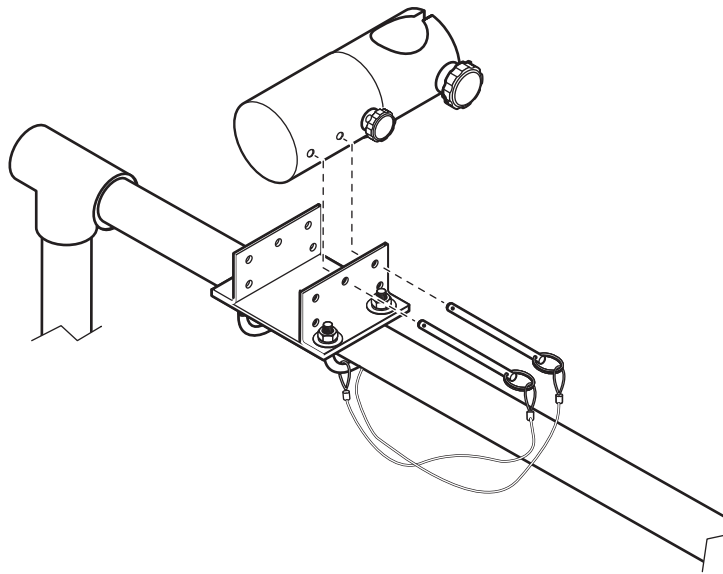


Figure 4: Installing the immersed pipe bracket

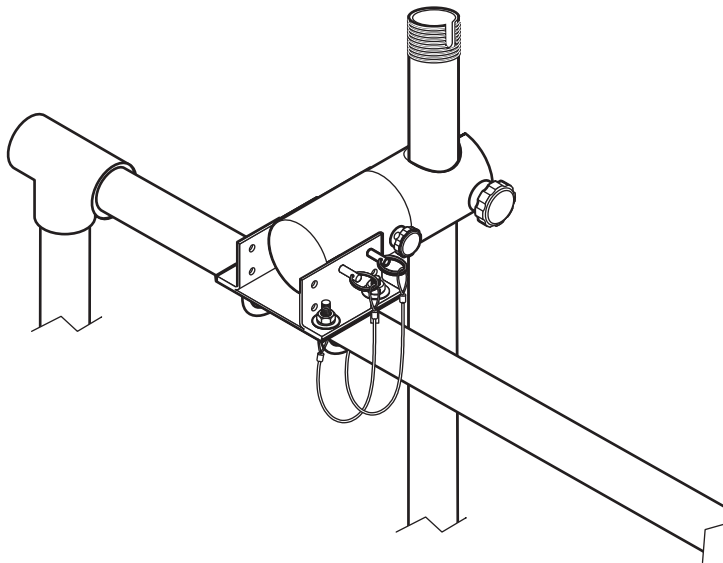


Figure 5: Installing the immersed pipe

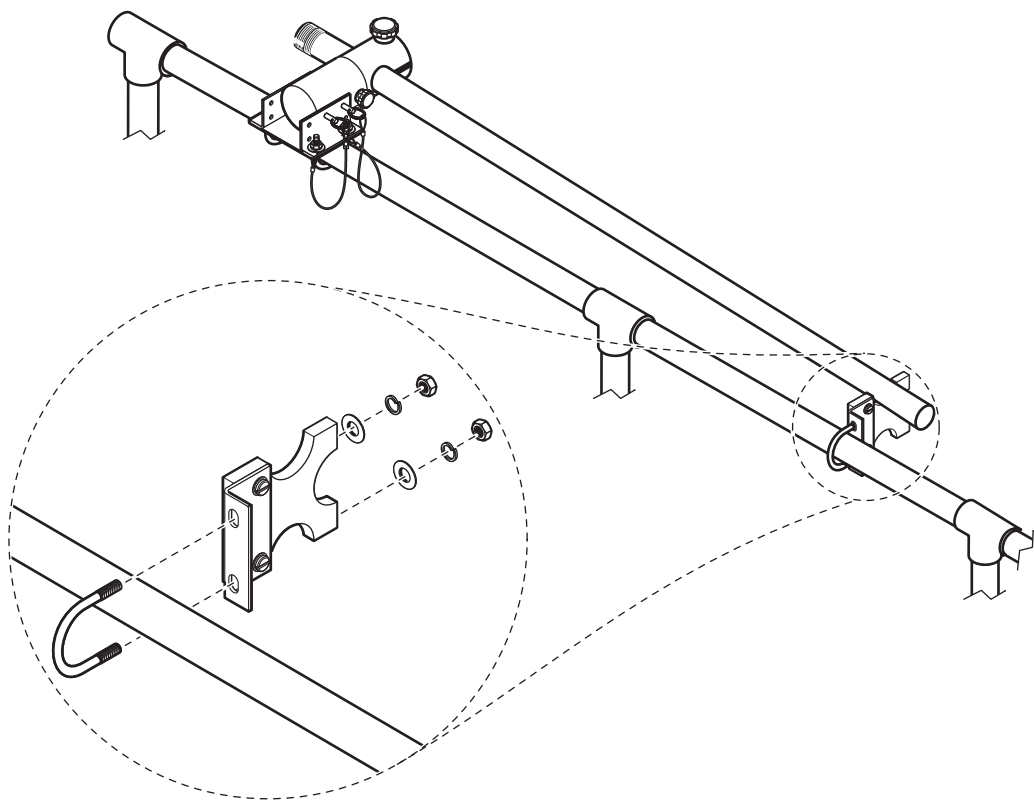


Figure 6: Installing the immersed pipe support

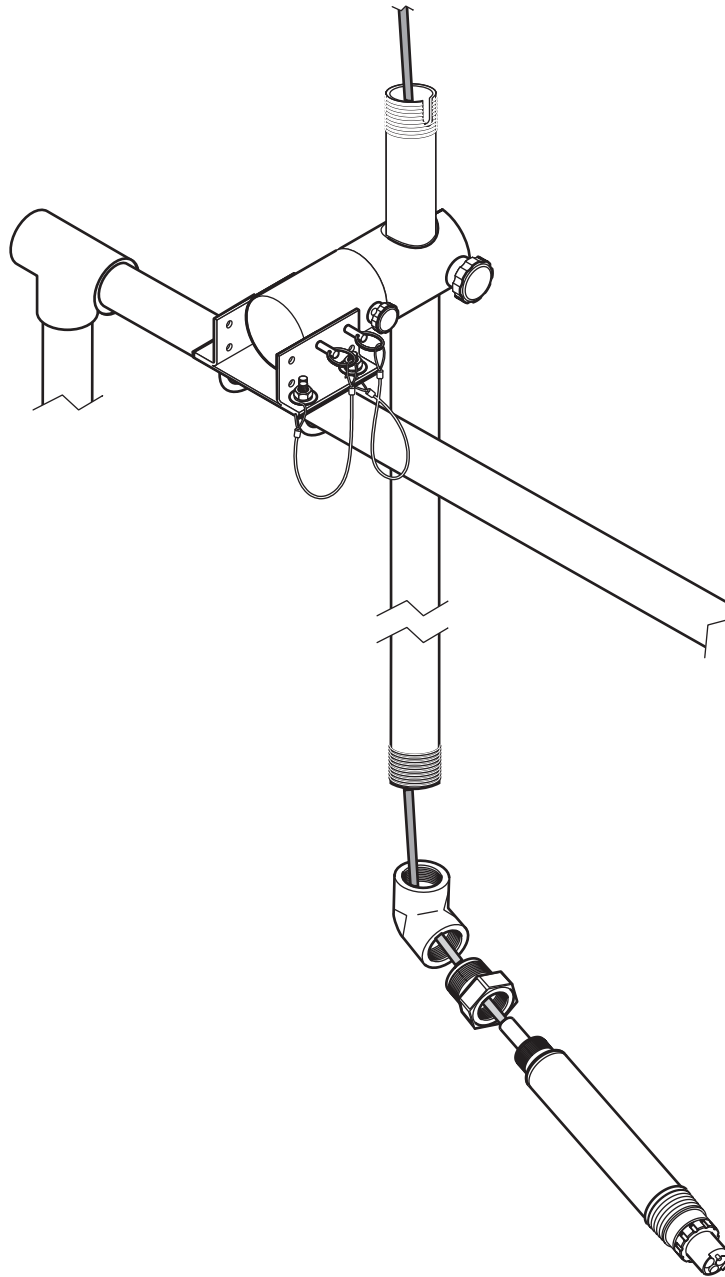


Figure 7: Installing the sensor

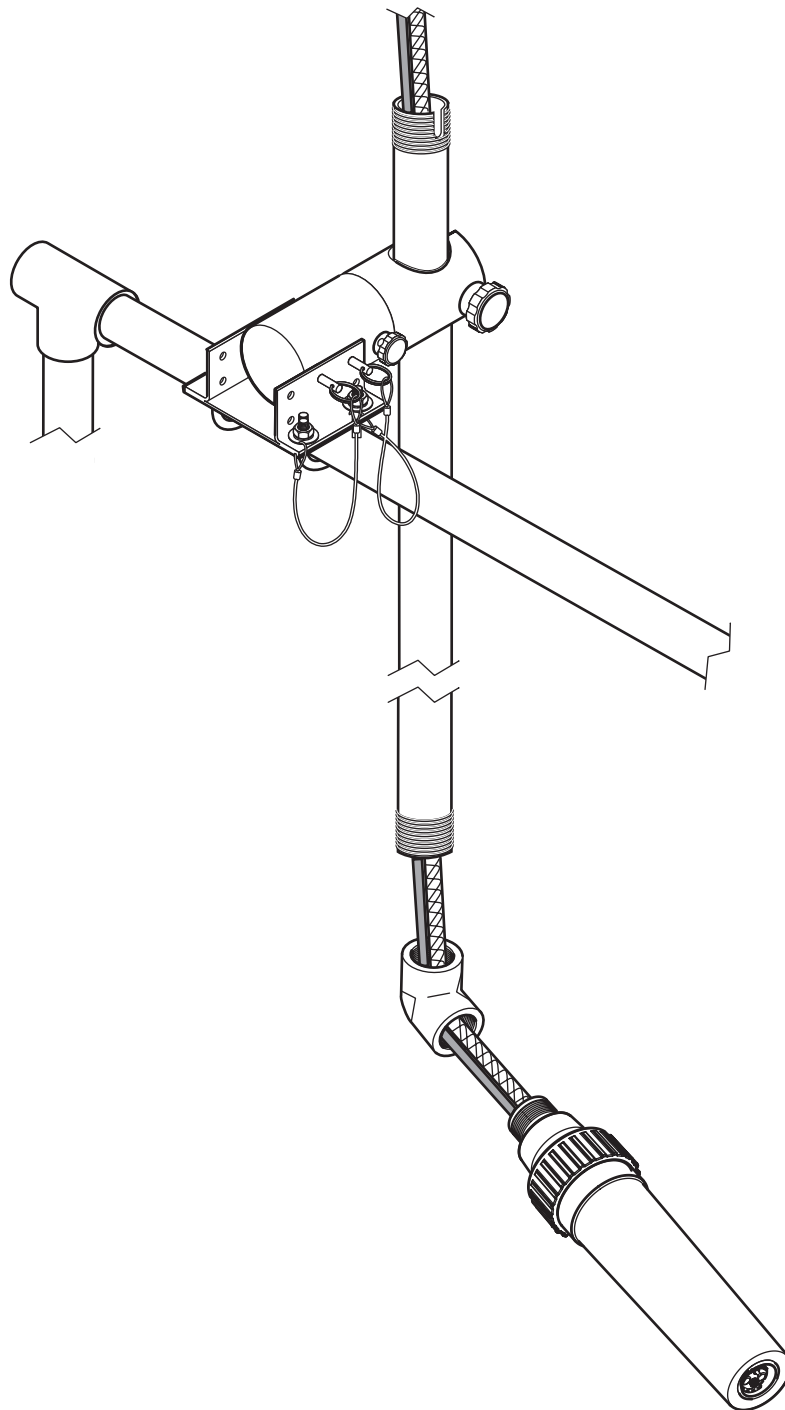


Figure 8: Installing the cleaning unit

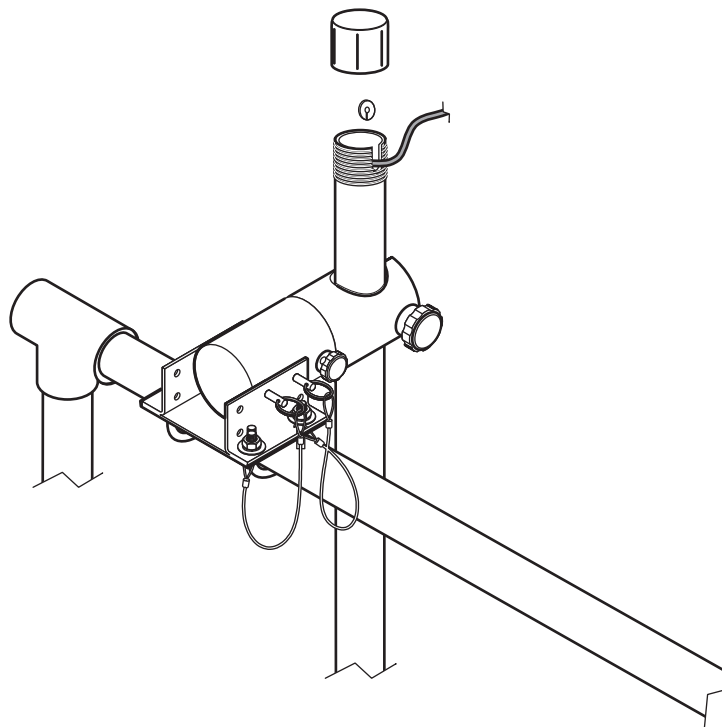


Figure 9: Installing the screw cap without the cleaning unit

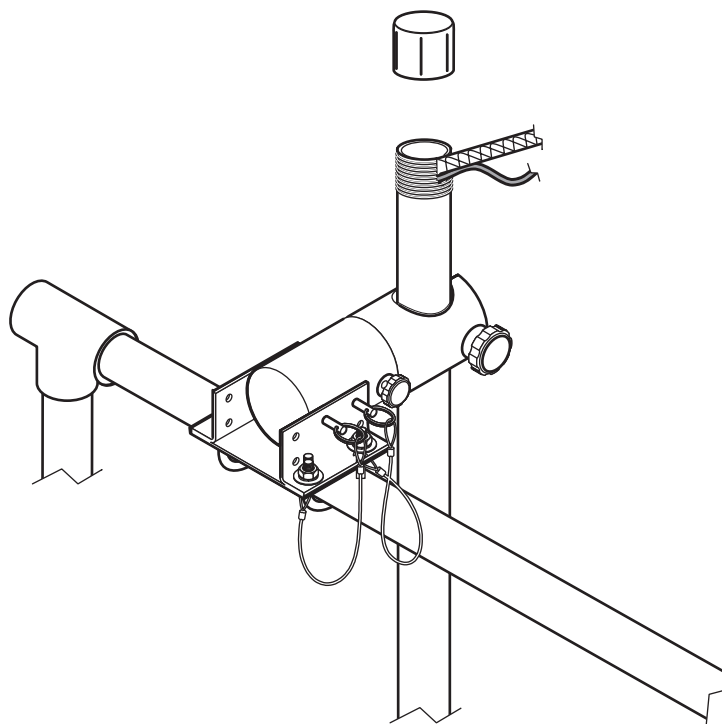


Figure 10: Installing the screw cap with the cleaning unit

Contact

HACH LANGE GMBH

Willstätterstraße 11
D-40549 Düsseldorf
Tel. +49 (0)2 11 52 88-0
Fax +49 (0)2 11 52 88-143
info@hach-lange.de
www.hach-lange.com

HACH LANGE LTD

Pacific Way
Salford
GB-Manchester, M50 1DL
Tel. +44 (0)161 872 14 87
Fax +44 (0)161 848 73 24
info@hach-lange.co.uk
www.hach-lange.co.uk

HACH LANGE LTD

Unit 1, Chestnut Road
Western Industrial Estate
IRL-Dublin 12
Tel. +353(0)1 46 02 5 22
Fax +353(0)1 4 50 93 37
info@hach-lange.ie
www.hach-lange.ie

DR. BRUNO LANGE GES. MBH

Industriestraße 12
A-3200 Obergrafendorf
Tel. +43 (0)27 47 74 12
Fax +43 (0)27 47 42 18
info@hach-lange.at
www.hach-lange.at

DR. BRUNO LANGE AG

Juchstrasse 1
CH-8604 Hegnau
Tel. +41(0)44 9 45 66 10
Fax +41(0)44 9 45 66 76
info@hach-lange.ch
www.hach-lange.ch

HACH LANGE FRANCE S.A.S.

33, Rue du Ballon
F-93165 Noisy Le Grand
Tél. +33 (0)1 48 15 68 70
Fax +33 (0)1 48 15 80 00
info@hach-lange.fr
www.hach-lange.fr

HACH LANGE SA

Motstraat 54
B-2800 Mechelen
Tél. +32 (0)15 42 35 00
Fax +32 (0)15 41 61 20
info@hach-lange.be
www.hach-lange.be

DR. LANGE NEDERLAND B.V.

Laan van Westroijen 2a
NL-4003 AZ Tiel
Tel. +31(0)344 63 11 30
Fax +31(0)344 63 11 50
info@hach-lange.nl
www.hach-lange.nl

HACH LANGE APS

Åkandevej 21
DK-2700 Brønshøj
Tel. +45 36 77 29 11
Fax +45 36 77 49 11
info@hach-lange.dk
www.hach-lange.dk

HACH LANGE AB

Vinthundsvägen 159A
SE-128 62 Sköndal
Tel. +46 (0)8 7 98 05 00
Fax +46 (0)8 7 98 05 30
info@hach-lange.se
www.hach-lange.se

HACH LANGE S.R.L.

Via Riccione, 14
I-20156 Milano
Tel. +39 02 39 23 14-1
Fax +39 02 39 23 14-39
info@hach-lange.it
www.hach-lange.it

HACH LANGE S.L.U.

Edif. Arteaga Centrum
C/Larrauri, 1C- 2ª Pl.
E-48160 Derio/Vizcaya
Tel. +34 94 657 33 88
Fax +34 94 657 33 97
info@hach-lange.es
www.hach-lange.es

HACH LANGE LDA

Av. do Forte nº8
Fracção M
P-2790-072 Carnaxide
Tel. +351 214 253 420
Fax +351 214 253 429
info@hach-lange.pt
www.hach-lange.pt

HACH LANGE SP.ZO.O.

ul. Opolska 143 a
PL-52-013 Wrocław
Tel. +48 (0)71 342 10-83
Fax +48 (0)71 342 10-79
info@hach-lange.pl
www.hach-lange.pl

HACH LANGE S.R.O.

Lešanská 2a/1176
CZ-141 00 Praha 4
Tel. +420 272 12 45 45
Fax +420 272 12 45 46
info@hach-lange.cz
www.hach-lange.cz

HACH LANGE S.R.O.

Roľnícka 21
SK-831 07 Bratislava – Vajnory
Tel. +421 (0)2 4820 9091
Fax +421 (0)2 4820 9093
info@hach-lange.sk
www.hach-lange.sk

HACH LANGE KFT.

Hegyalja u. 7-13.
H-1016 Budapest
Tel. +36 (06)1 225 7783
Fax +36 (06)1 225 7784
info@hach-lange.hu
www.hach-lange.hu

HACH LANGE S.R.L.

str. Aviator Teodor Iliescu nr.37,
Sector 1
RO-011672, Bucuresti
Tel. +40 (0)21 2 08 95 78
Fax +40 (0)21 2 08 95 78
info@hach-lange.ro
www.hach-lange.ro

HACH LANGE

8, Kr. Sarafov str.
BG-1164 Sofia
Tel. +359 (0)2 963 44 54
Fax +359 (0)2 866 04 47
info@hach-lange.bg
www.hach-lange.bg

HACH LANGE SU

ANALİZ SİSTEMLERİ LTD.ŞTİ.

Hilal Mah. 75. Sokak
Arman Plaza No: 9/A
TR-06550 Çankaya/ANKARA
Tel. +90 (0)312 440 98 98
Fax +90 (0)312 442 11 01
bilgi@hach-lange.com.tr
www.hach-lange.com.tr

HACH LANGE D.O.O.

Fajfarjeva 15
SI-1230 Domžale
Tel. +386 (0)59 051 000
Fax +386 (0)59 051 010
info@hach-lange.si
www.hach-lange.si

HACH LANGE E.Π.E.

Αυλίδος 27
GR-115 27 Αθήνα
Τηλ. +30 210 7777038
Fax +30 210 7777976
info@hach-lange.gr
www.hach-lange.gr

HACH LANGE E.P.E.

27, Avlidos str
GR-115 27 Athens
Tel. +30 210 7777038
Fax +30 210 7777976
info@hach-lange.gr
www.hach-lange.gr